
 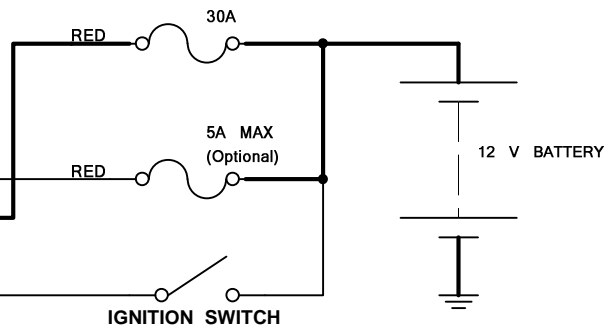



OPEN = SELECT CALIBRATION 1
 CLOSE = SELECT CALIBRATION 2



- IMPORTANT:**
1. CALIBRATION SELECT SWITCH I/P IS IGNORED WHILE SERIAL DATA RECEPTION IS IN PROGRESS.
 2. OUTPUTS NOT CONTROLLED BY CURRENTLY SELECTED CALIBRATION WILL REMAIN IN STATE COMMANDED BY THE PREVIOUSLY SELECTED CALIBRATION.
 3. FOR CORRECT ECU OPERATION AND TO AVOID POSSIBLE ENGINE AND/OR IGNITION SYSTEM COMPONENT DAMAGE ENSURE THAT BOTH CALIBRATIONS ARE CONFIGURED FOR THE SAME TRIGGER TYPE, IGNITION & INJECTION O/P PATTERNS.
 4. PIN 39 CANNOT BE USED AS A SPEED/FREQUENCY INPUT
 5. ONLY APPLICABLE TO DUAL CAL SM4 ECU.

DUAL CAL SM4 ECU

© Copyright		 Autronic FUEL INJECTION — ADVANCED CONTROLS
Aubert Electronics Pty. Ltd. Victoria Australia		
Title: SM4 DUAL CAL ECU - CALIBRATION SWITCHING		
Approved by: RWA	Date: 08-Jun-16	Size: A4
Document No: SM4_DC_01	Sheet 1 of 1	Revision: 1.2