

## **SM2 ECU INJECTOR OUTPUT CURRENT SELECTION**

Early SM2 ECUs (Revs A thru E) are fitted with fixed current Injector Drivers (attached to side of case). Last 2 characters of the serial number identify the factory fitted driver type ('A2' = low = 2A peak / 0.5A hold, 'A4' = high = 4A peak / 1A hold). Drive current cannot be changed in the field. Contact AUTRONIC about driver



Late SM2 ECUs (Revs F & G) are fitted with current selectable switching type Injector Drivers. When a jumper link is fitted between pins 1 & 2 of CON3 drive current is high (4A peak / 1A hold). When a jumper link is fitted between pins 2 & 3 of CON3 drive current is low (2A peak / 0.5A hold). Last 2 characters of the serial number indicates the jumper selection fitted when the product left the factory ('A2' = 2Apeak / 0.5A hold, 'A4' = 4A peak / 1A hold).



Doc:-SM2 INJ DRIVE SELECTION rev1 13-May-2016